


The Electronic Classroom (EC) consists of three basic units: 1) **Ceiling Projector** and **Remote Control**; 2) **Computer** and **Monitor**; and 3) **Equipment Rack** (shown below). Equipment rack includes: Main Power, Auxiliary Plate, Kramer Switcher, Mixer, and VHS player.

To Turn On the Ceiling Projector*:

1. Locate the **remote control** (in the Monitor/Keyboard drawer).
2. Point the remote at the ceiling projector and press softly, the **ON** button in the upper right hand corner, a few times. You should see a blue light gradually glowing in the projector lens; this can take up to 1 minute.

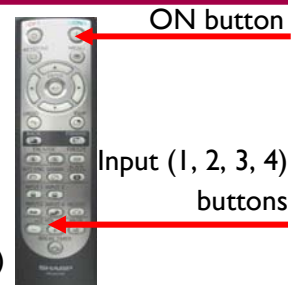

***Note:** To get access to the remote, please contact Chemistry Department in FH 125 (x8-3100)

To Turn On Equipment*:

The **Equipment Rack** is located inside the **cabinet** beneath the **table**.

1. Make sure the Main Power switch (on the right), as shown below, is "ON".
2. Make sure the Kramer Switcher Power is turned on (to the left).
3. To adjust the volume, turn the knob for the appropriate device (Video, PC, Laptop) on the Volume Mixer.



***Note:** The power buttons of all rack equipment should remain in the "ON" position.

To Project an Image from the Computer Workstation*:

1. Turn on the computer and monitor, if not already on, as you normally would.
2. Turn on the data projector (see "To Turn on the Data Projector" Instructions above).
3. Press the **PC** button (VGA-Audio) and the **VGA** button (Master Audio) on the Kramer Switcher.



4. If you do not see the computer image: on the remote control, press the **INPUT 1** button.

***Note:** To get access to the Computer, please contact Chemistry Department in FH 125 (x8-3100)

To Login to a Workstation:

1. At the Novell Login window, click the **Advanced** button, then select these options from the fields below:
 Tree: **LOYOLA**
 Context: **HIGHERED.LS.LOYOLA** or **HIGHERED.WT.LOYOLA**
 Server: (leave blank)
2. At the Novell Login window, type your Username and Password then click OK.

For immediate assistance, please call x4-4444

To Use your Laptop Computer in the Classroom*:

5. Turn on the ceiling projector (see “To Turn on the Ceiling Projector” Instructions).
6. Connect the laptop’s **VGA** output and **audio** ports to the “COMPUTER DISPLAY” and “COMPUTER AUDIO” inputs on the **Aux Plate**.
7. On the remote control, press the **INPUT 1** button.
8. Press the **AUX. PC** button (VGA-Audio) and the **VGA** button (Master Audio) on the Kramer Switcher.
9. If you don’t see the laptop’s image on the screen, toggle the **laptop’s** Function LCD/CRT (Display) button.



*To request cables to connect your laptop, please contact the Support Center at x4-4444.

Projecting a VHS tape or DVD disc*:

1. Turn on ceiling projector (see “To Turn on the Ceiling Projector” Instructions).
2. Press the **VCR or DVD** button (Video-Audio) and the **CV** button (Master Audio) on the Kramer Switcher.
3. On the projector remote control, press the **INPUT 4** button.
4. Insert your video, and press play.



* To get access to the drawer containing the **VHS or DVD Remote Control**, please contact the Chemistry Department in FH 125 (x8-3100).

Please Power Down the Projector Before You Leave the Room

System Shutdown:

Point the remote at the ceiling projector and press the **OFF** button, in the upper right corner, **TWICE**. You should see the blue glow within the lens shutoff and the screen goes dark.

NOTE: *The fan remains on even though the projector is off.*



For immediate assistance, please call x4-4444